



ASSEMBLY INSTRUCTION


Item: **CD037 Dining Chair**



Notice:

- ① Don't use power stool.
- ② Don't tighten until assembly all.

STEP 1:

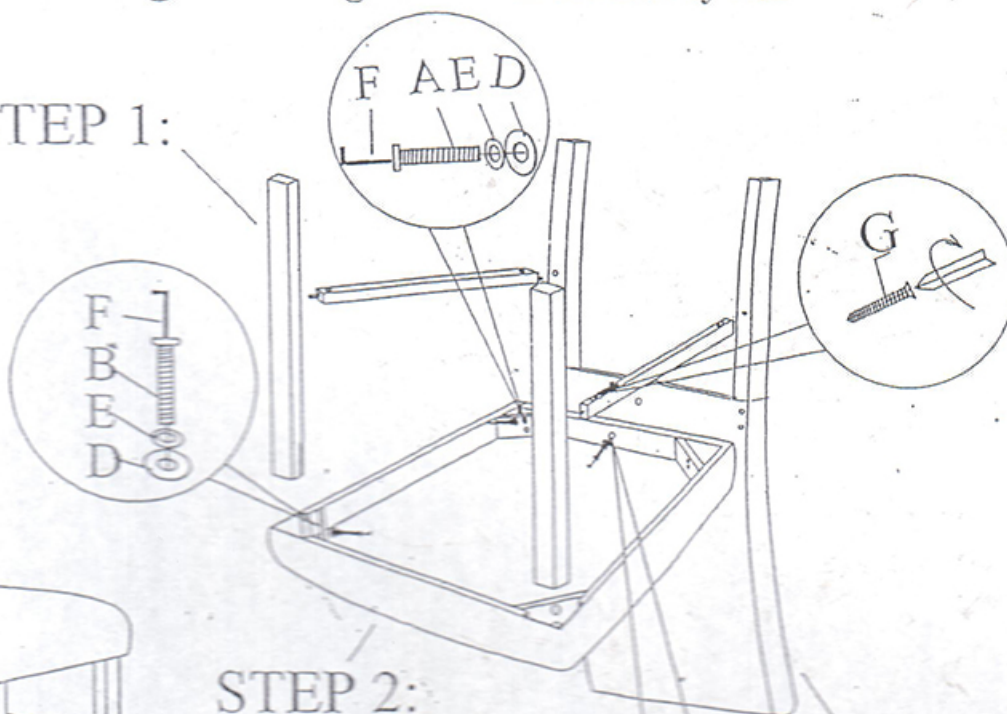

STEP 2:

STEP 4:

STEP 3:



Assembly loosening finger tighten , Do not
tighten until assembly all legs.

PARTS LIST

HARDWARE LIST

PARTS LIST				HARDWARE LIST			
1		Leg	2pcs	A		Bolt(Ø5/16"*3-1/2" L)	4pcs
				B		Bolt(Ø5/16"*2-1/4" L)	4pcs
2		Seat Frame	1pc	C		Bolt(Ø5/16"*1-3/4" L)	1pc
				D		Washer(Ø5/16"*19mm)	9pcs
3		Chair Back	1pc	E		Lock Washer(Ø5/16")	9pcs
				F		Allen Wrench	1pc
4		Side connector	2pcs	G		Wood screw#8*1-1/2	4pcs