

ASSEMBLY INSTRUCTIONS MODEL: LISA DINING TABLE

Please read instructions carefully

Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.

1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.


- 3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.


PARTS LIST (FOR 1 NOS. OF TABLE)


NO.	COMPONENT	QTY.
P1	PEDESTAL LEGS	2
P2	. LEG PRONGS	4
P3	BOTTOM STRETCHER	1
P4	TOP RAIL	1
P5	MOUNTING BAR	4
P6	TABLE TOP	1

HARDWARE LIST (FOR I NOS. OF TABLE)

NO.	DESCRIPTION	QTY
HI	WRENCH C	1
H2	HEX NUT	24
Н3	M8 SPRING WASHER	24
H4	M8 FLAT WASHER	24
H5	ALLEN KEY	
H6	JCBC M6 X 70mm	2
H7	M6 SPRING WASHER	2
Н8	M4 X 32mm WOOD SCREW	16

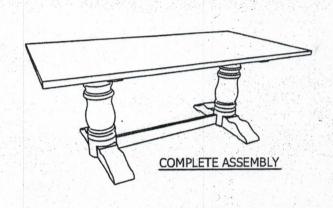

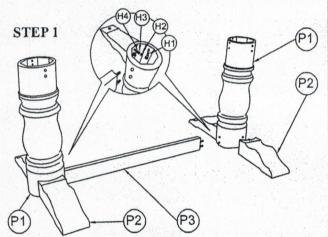

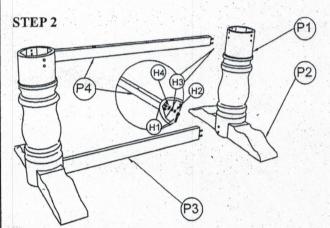

Assemble leg prongs P2 to both Pedestal Legs P1, then align Bottom Stretcher P3 and Top Rail P4 to connect both Pedestal Legs.

