

## **ASSEMBLY INSTRUCTIONS** ITEM: MICHELLE DINING TABLE

## Please read instructions carefully


Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from being scratched. CAUTIONS: 1) DO NOT FULLY TIGHTEN BOUTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.


- 2) DO NOT OVER-TIGHTEN BOLTS AND NUTS AS IT MAY DAMAGE THE SCREW RHREAD.
- 3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.


## PARTS LIST (FOR 1 NOS. OF TABLE)


NO.	COMPONENT	QTY
Pl	PEDESTAL LEGS A	2
P2	LEG PRONGS	1
6.9	END LEG PRONGS	2
PA	BOTTOM STRETCHER	1
P5	TOP RAIL	1
Ph	MOUNTING BAR	4
P7	TABLE TOP	1

h.	TABLE RIP		1
LARI	WARE LIST (FOR 1	NOS, OF TA	BLE)
NO.	DESCRIPTION		QTY
H1	WRENCH	=====	1
112	HEX NUT	(S)	24
Н3	M8 SPRING WASHER	(2)	24
H4	M8 TLAT WASHER	(D)	24
H5	ALLENKEY	Commonwear.	1
116	JCBC M6 X 70mm	S. management	2
H7	JCBC M6 X40mm	9: *****	4
H8	M6 SPRING WASHER	(4)	6
119	SCREW M4 X 32mm	Эппиния	16
H10	ADJUSTABLE GLIDE	d	6

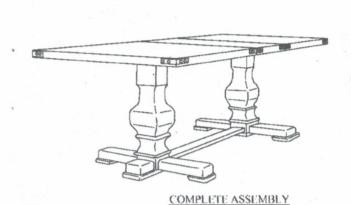

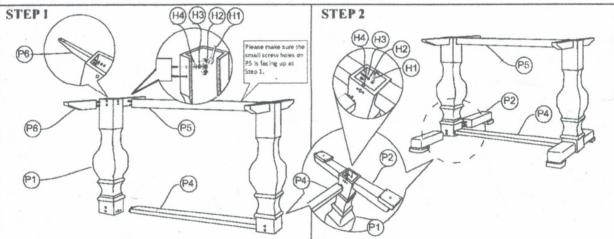

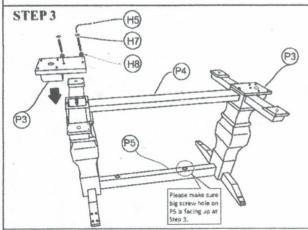

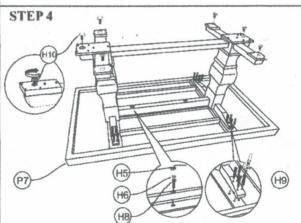

## CARE AND MAINTENANCE

- To avoid any risk of suffication to children and animals, dispose off plastic bags immediately.

 Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.
Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted. FITTINGS

If any of the components are damaged or broken they should be removed from service