









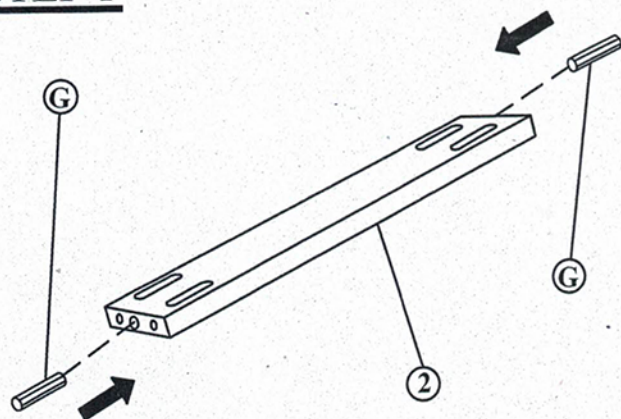
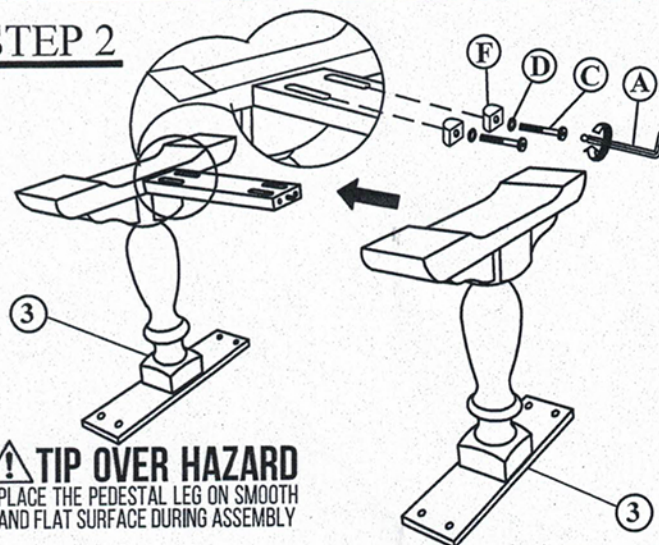
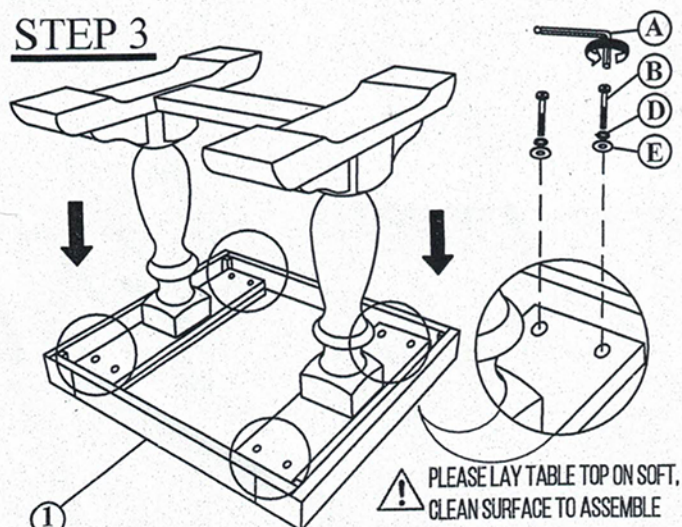
**IMPORTANT NOTE :**

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

PARTS LIST		
NO.	COMPONENT	QTY.
1	TABLE TOP 	1 PCS
2	LOWER STRETCHER 	1 PCS
3	LEG ASSEMBLY 	2 PCS

HARDWARE LIST		
NO.	DESCRIPTION	QTY.
A	M4 x 100MM ALLEN KEY 	1 PCS
B	M6 x 30MM SCREW 	8 PCS
C	M6 x 50MM SCREW 	4 PCS
D	M6 x 13MM SPRING WASHER 	12 PCS
E	M6 x 19MM FLAT WASHER 	8 PCS
F	D SHAPE SPACER 	4 PCS
G	M10 x 30MM WOOD DOWEL 	2 PCS

STEP 1**STEP 2****STEP 3****STEP 4**