

ASSEMBLY INSTRUCTIONS MODEL: JESSICA DINING CHAIR

Please read instructions carefully

Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched. CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.


- 2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
- 3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.


PARTS LIST (FOR 2 NOS. OF CHAIRS)


NO.	COMPONENT	QTY.
P1	CHAIR BACK	2
P2	CHAIR SEAT	2
P3	FRONT LEG	4


HARDWARE LIST (FOR 2 NOS. OF CHAIRS)


NO.	DESCRIPTION		QTY
HI	JCBC SCREW M6 X 60	O BUILDING	8
H2	JCBC SCREW M6 X 45	() marino	14
H3	SPRING WASHER	0	22
H4	FLAT WASHER	0	22
H5	ALLEN KEY	Charles and the Control of the Contr	1
H6	NAIL LEG	=0	8

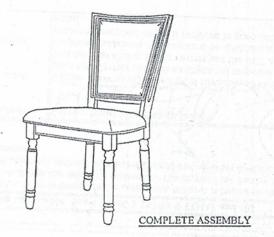

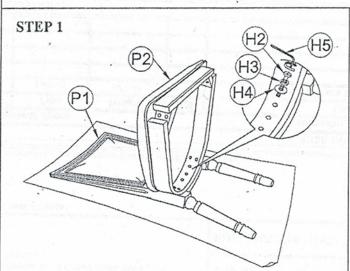

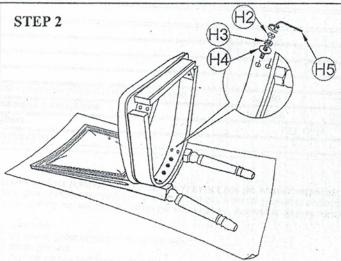

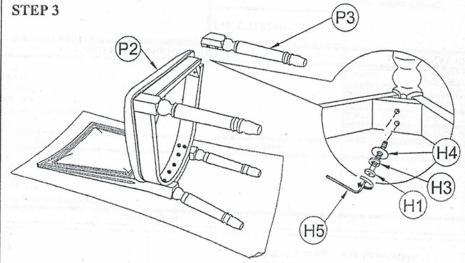

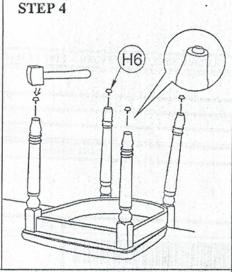

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children and animals, dispose off plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.