



B1981B/B1981G-Q

QUEEN SIZE BED

The Imported Furniture Specialist

ASSEMBLY INSTRUCTIONS



PAGE 1 OF 6 2 GASH SHLIBEL STOK

ITEM: B1981B/B1981G-Q

ASSEMBLY TIPS:

1.Remove hardware from box and sort by size.


2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly .



Warning!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

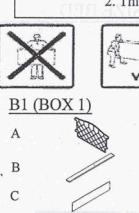



ASSEMBLY TIME

40 MINUTES


Best Master Furniture

B1 (B	OX 1)	PARTS	S IDEN	TIFICA	ATION		
Α		HEADBOARD	1PC	G		BED SLAT	10PCS
В		HEADBOARD SUPPORT LEG	2PCS	Н		BED SLAT WITH HOLES	3PCS
С		HEADBOARD PANEL	1PC	I		BED SLAT SUPPORT	6PCS
B2 (BOX 2)				I		FOOTBOARD	2PCS
D1		RIGHT EAR PANEL	1PC		Ö	LEG	
D2		LEFT EAR PANEL	1PC	K		CENTER RAIL	2PCS
B3 (BOX 3)			L		CENTER RAIL SUPPORT	2PCS	
Е	STATISTICAL STATES	FOOTBOARD	1PC	HB		HEADBOARD COMPLETE	170
F1		LEFT BED RAIL	1PC	ПБ		*FROM BOX 1	1PC
F2	(DANNAMA)	RIGHT BED RAIL	1PC	ER	9	LEFT AND RIGHT EAR PANEL COMPLETE *FROM BOX 2	2PCS


HARDWARE IDENTIFICATION

<u>Z(B3)- BOX 3 -</u>		HARDWARE PACK IS LOCATED IN BOX 3					
1		ALLEN WRENCH	1PC	7	0	MEDIUM SCREW	4PCS
2	0	SHORT BOLT	4PCS	8	0	LONG SCREW	28PCS
3	0	MEDIUM BOLT	10PCS	9		LARGE FLAT WASHER	22PCS
4	0	LONG BOLT	10PCS	10		SMALL FLAT WASHER	.22PCS
5	0	LONGEST BOLT	8PCS	11		LOCK WASHER	22PCS
6	0	SHORT SCREW	4PCS	12		LEVELER	6PCS


NOTE: PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS; HOWEVER, MANUFACTURER DOES NOT PROVIDE THIS ITEM.

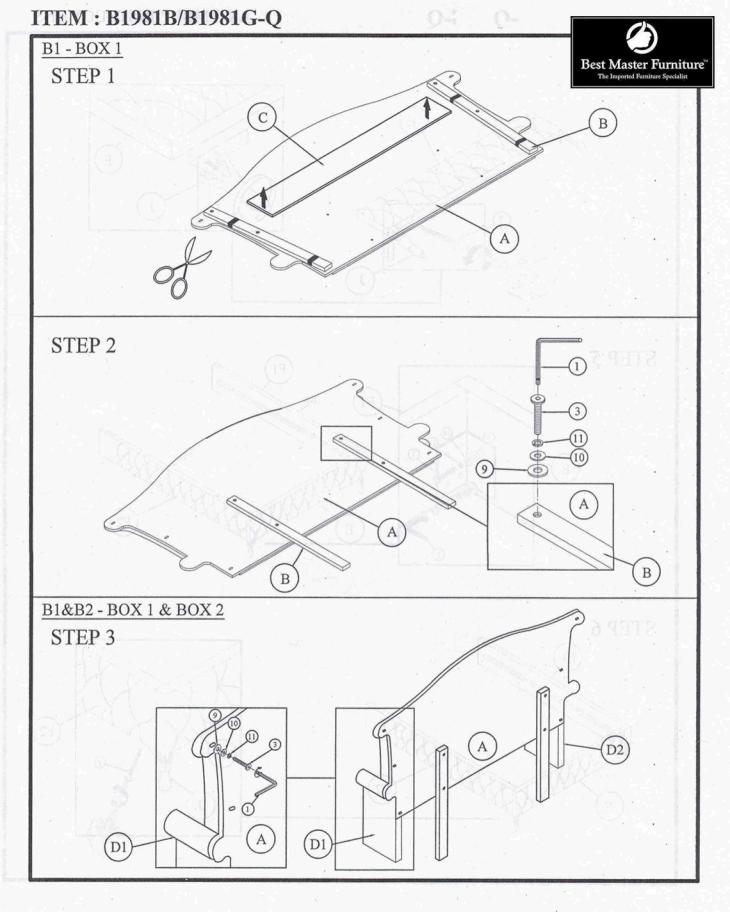


PAGE 3 OF 6

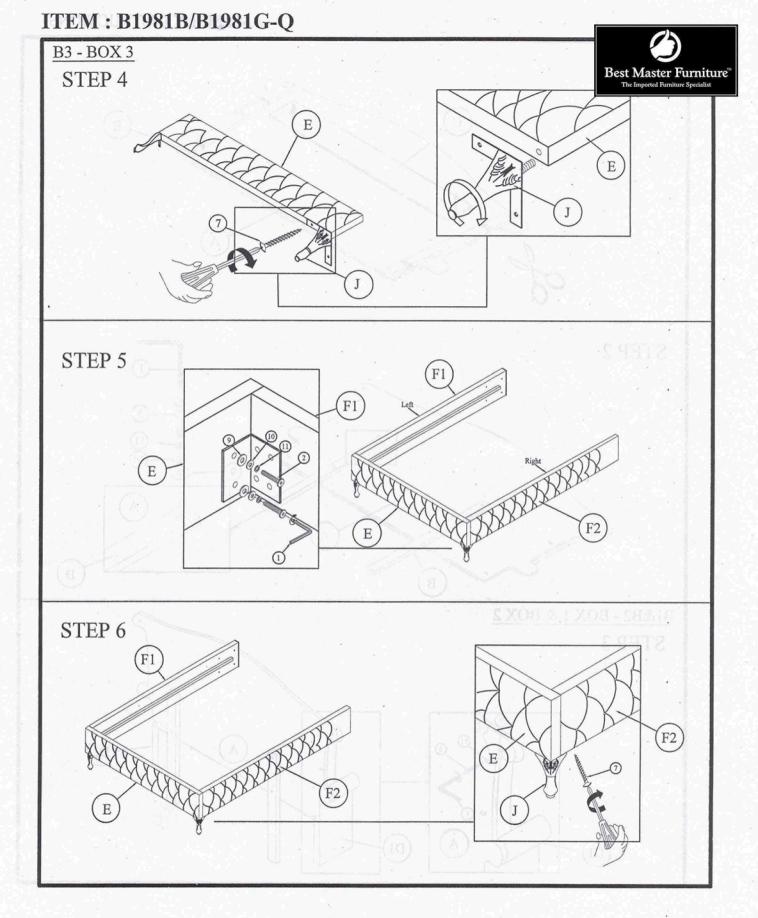

PAGE 4 OF 6

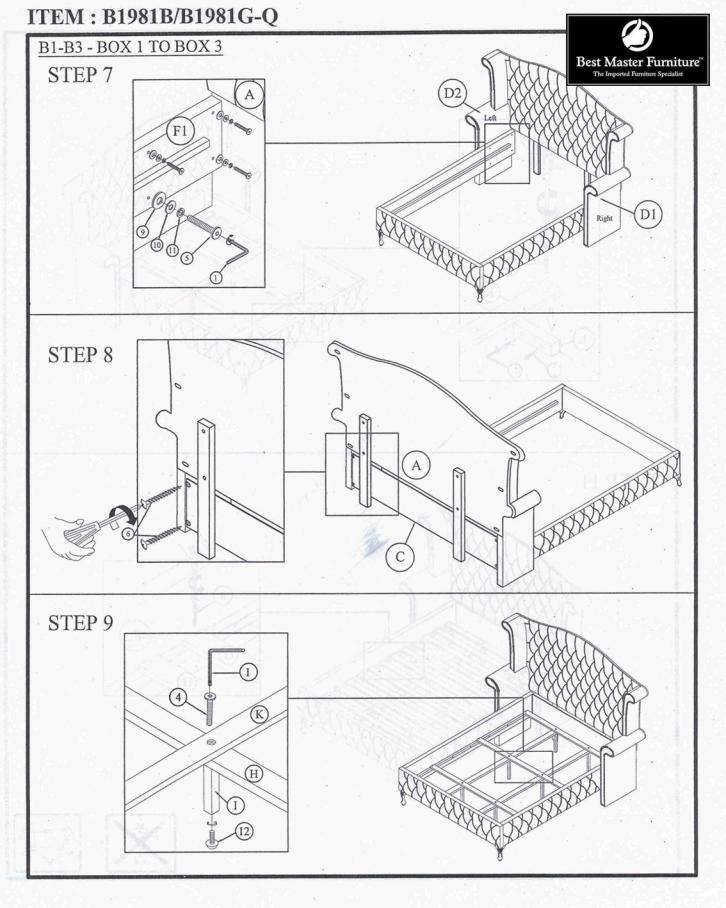

PAGE 5 OF 6

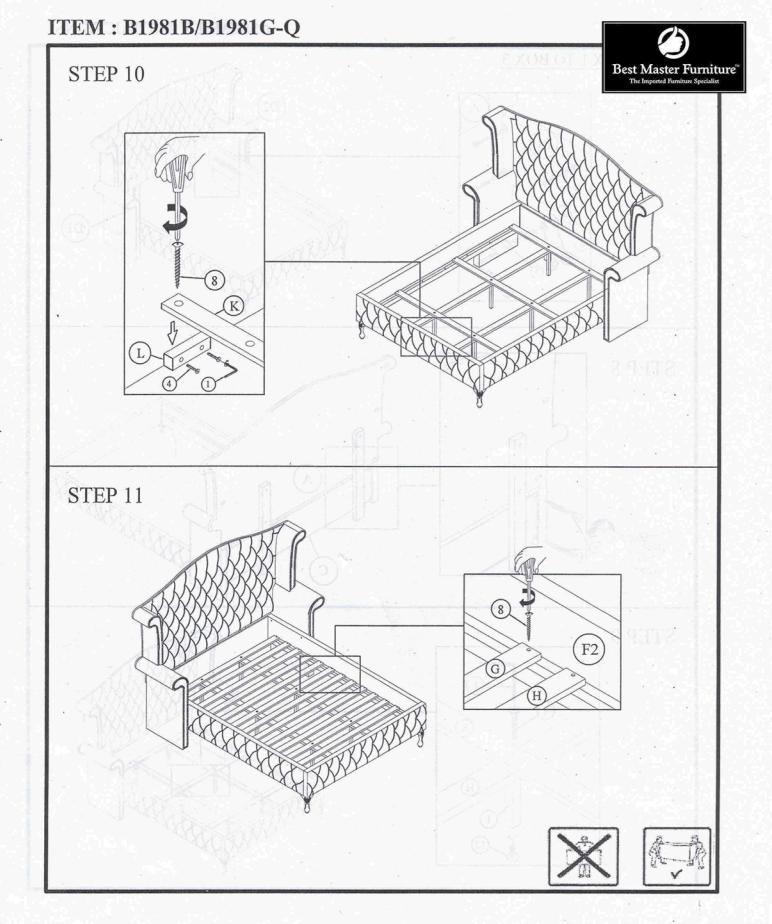

PAGE 6 OF 6