



B1981B/B1981G-D&M

DRESSER & MIRROR

The Imported Furniture Specialist

ASSEMBLY INSTRUCTIONS



PAGE 1 OF 3

ITEM: B1981B/B1981G-D&M

Best Master Furniture™ The Imported Furniture Specialist

ASSEMBLY TIPS:

1.Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately .
- 2. This product is for home use only and not intended for commercial establishment.






ASSEMBLY TIME

5 MINUTES

| | PARTS IDENTIFICATION | | | HARDWARE IDENTIFICATION | | | |
|---|--|------|---|-------------------------|--------------|-------|--|
| A | DRESSER | 1PC | 1 | | ALLEN WRENCH | I 1PC | |
| | | | 2 | 0 | BOLT | 8PCS | |
| В | MIRROR | 1PC | 3 | | LOCK WASHER | 8PCS | |
| C | MIRROR SUPPORT (PACKED WITH MIRROR) | 2PCS | 4 | | FLAT WASHER | 8PCS | |
| | | | | | | | |

NOTE: PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS; HOWEVER, MANUFACTURER DOES NOT PROVIDE THIS ITEM.

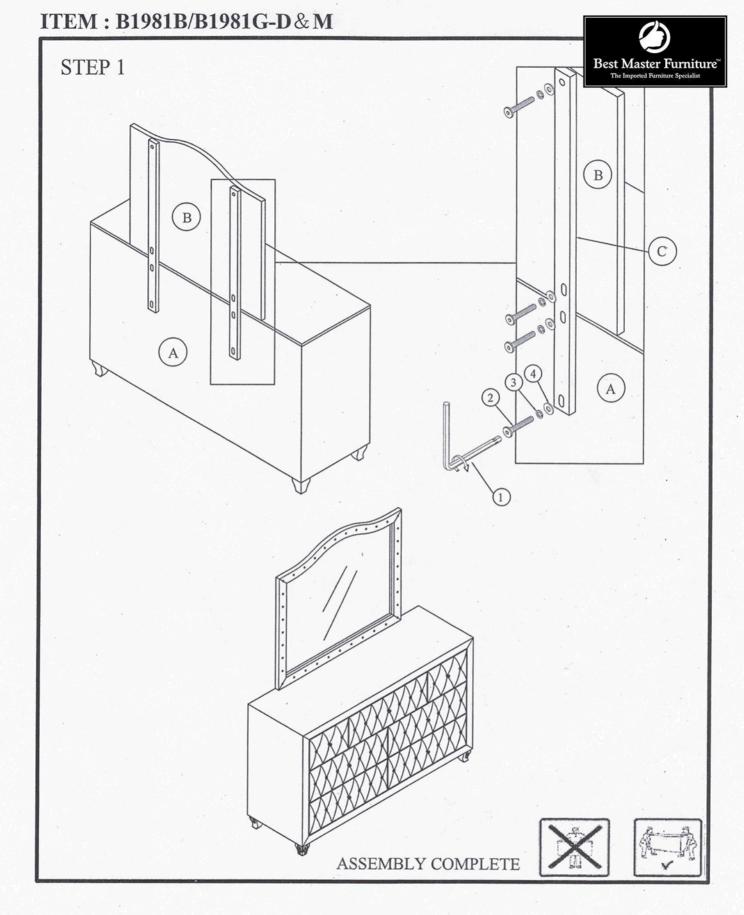

PAGE 3 OF 3