

Assembly Instruction

ITEM NO.: YY135-Q

IMPORTANT: PLACE ALL PARTS ON A CLEAN AND SMOOTH

SURFACE SUCH AS A RUG OR CARPETTO


AVOID THE PARTS FROM BEING SCRATCHED


KINDLY FOLLOW THE ADDEMBLY


INSTRUCTIONS STEP

DO NOT TIGHTEN ALL SCREWS UNTIL THE BED


IS FULLY SET-UP

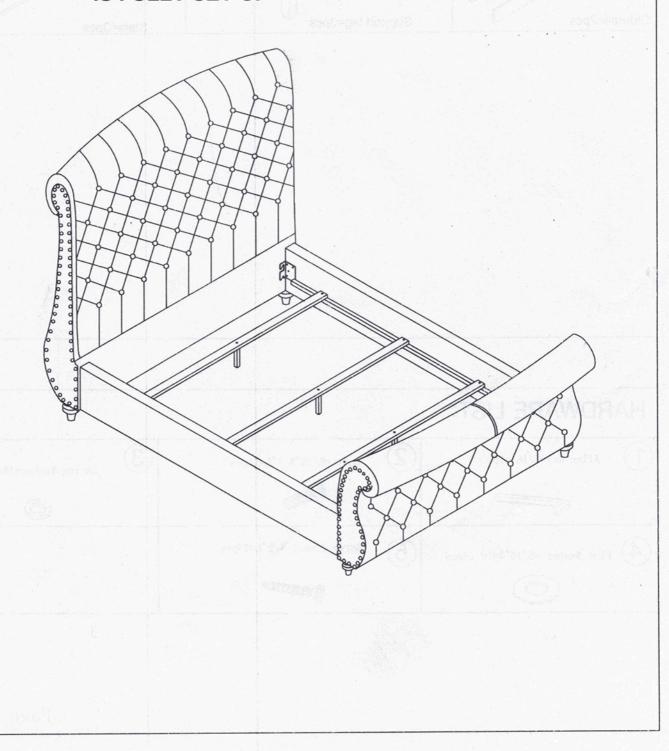

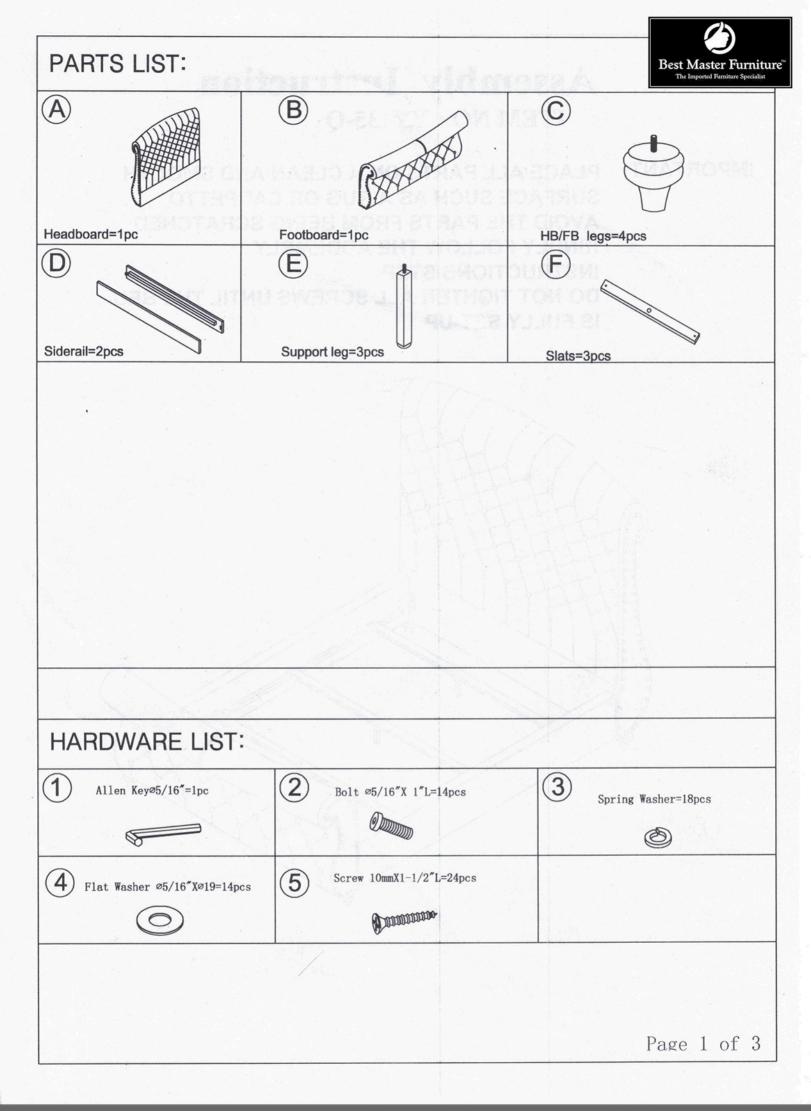


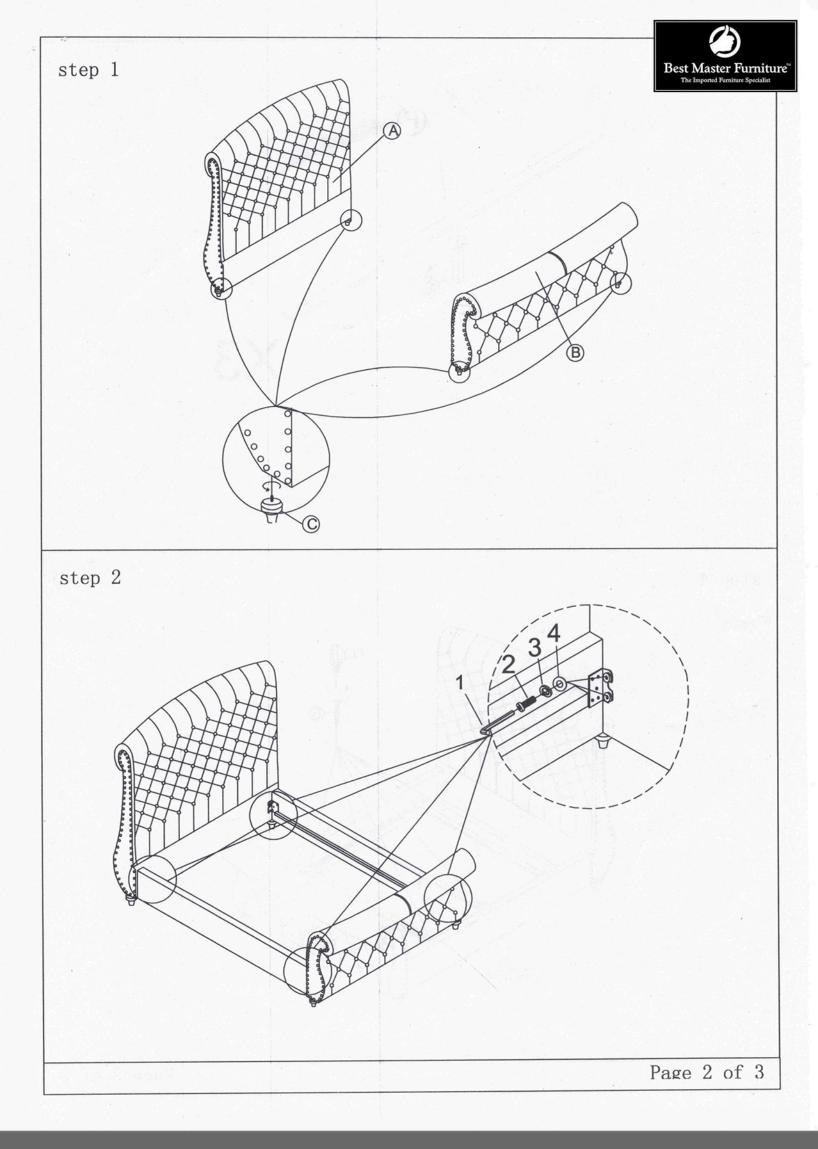



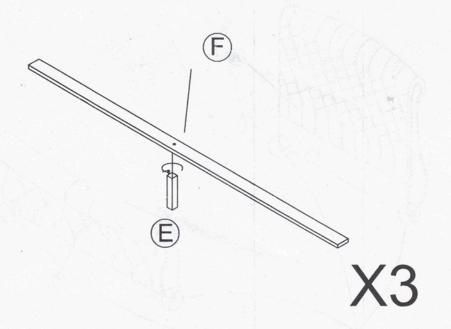

step 4

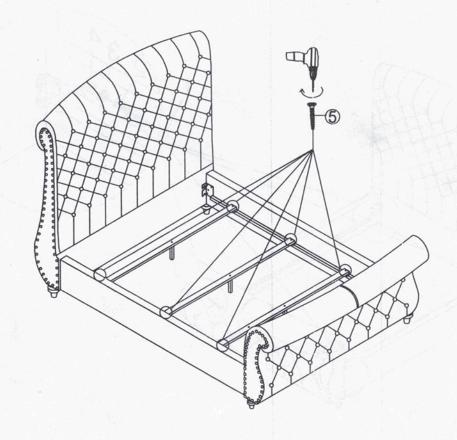

Page 3 of 3