




ASSEMBLY INSTRUCTION

ITEM#BM2002


NO	PARTS	QTY
A	CABINET	1 PC
B	LEG	4 PCS

NO	HARDWARE	SIZE	QTY
Z01	BOLT	Ø8mm×30mm	8 PCS
Z02	FLAT WASHER	Ø8mm	8 PCS
Z03	SPRING WASHER	Ø8mm	8 PCS
Z04	ALLEN KEY	Ø5mm	1 PC

STEP1

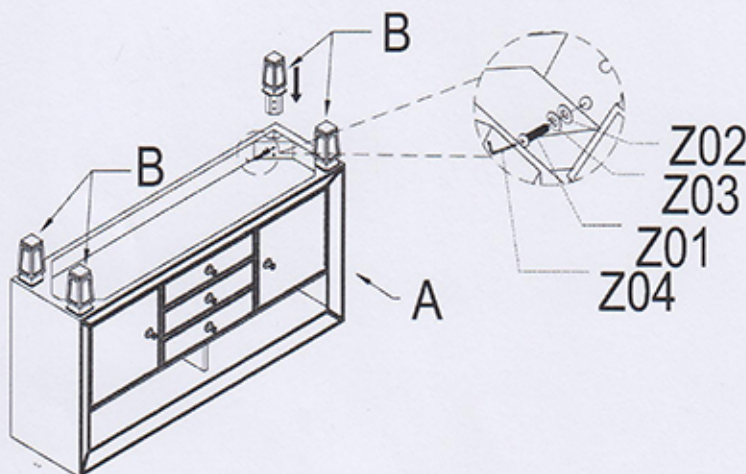

STEP2

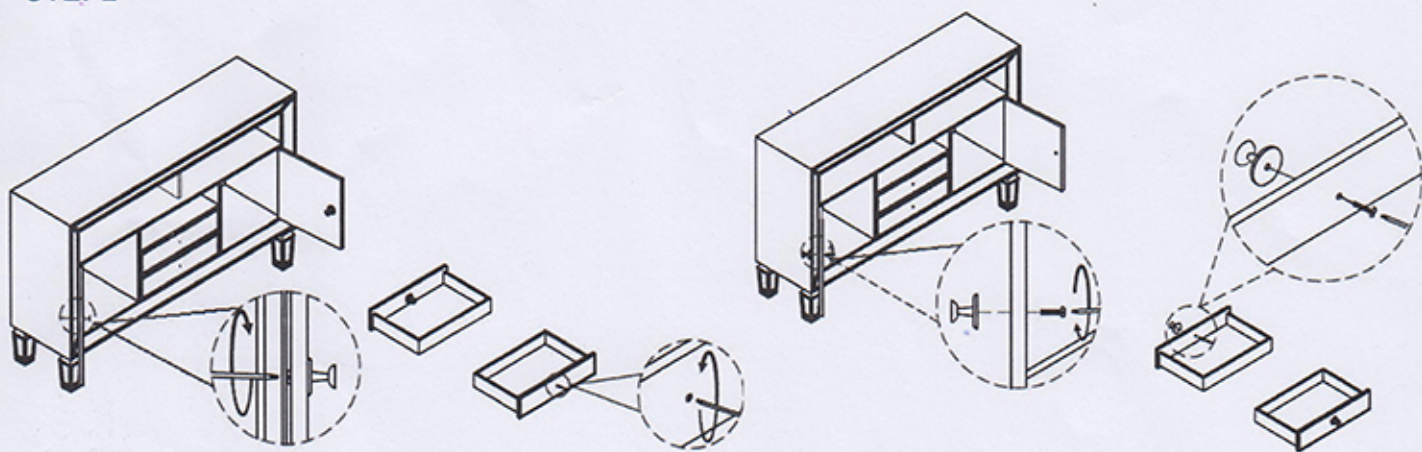

Finish

