




ASSEMBLY INSTRUCTION

ITEM#BM2008

NO	PARTS	QTY
A	CABINET 	1 PC
B	LEG 	4 PCS

NO	HARDWARE	SIZE	QTY
Z01	BOLT 	Ø8mm*30mm	8 PCS
Z02	FLAT WASHER 	Ø8mm	8 PCS
Z03	SPRING WASHER 	Ø8mm	8 PCS
Z04	ALLEN KEY 	Ø5mm	1 PC

STEP1

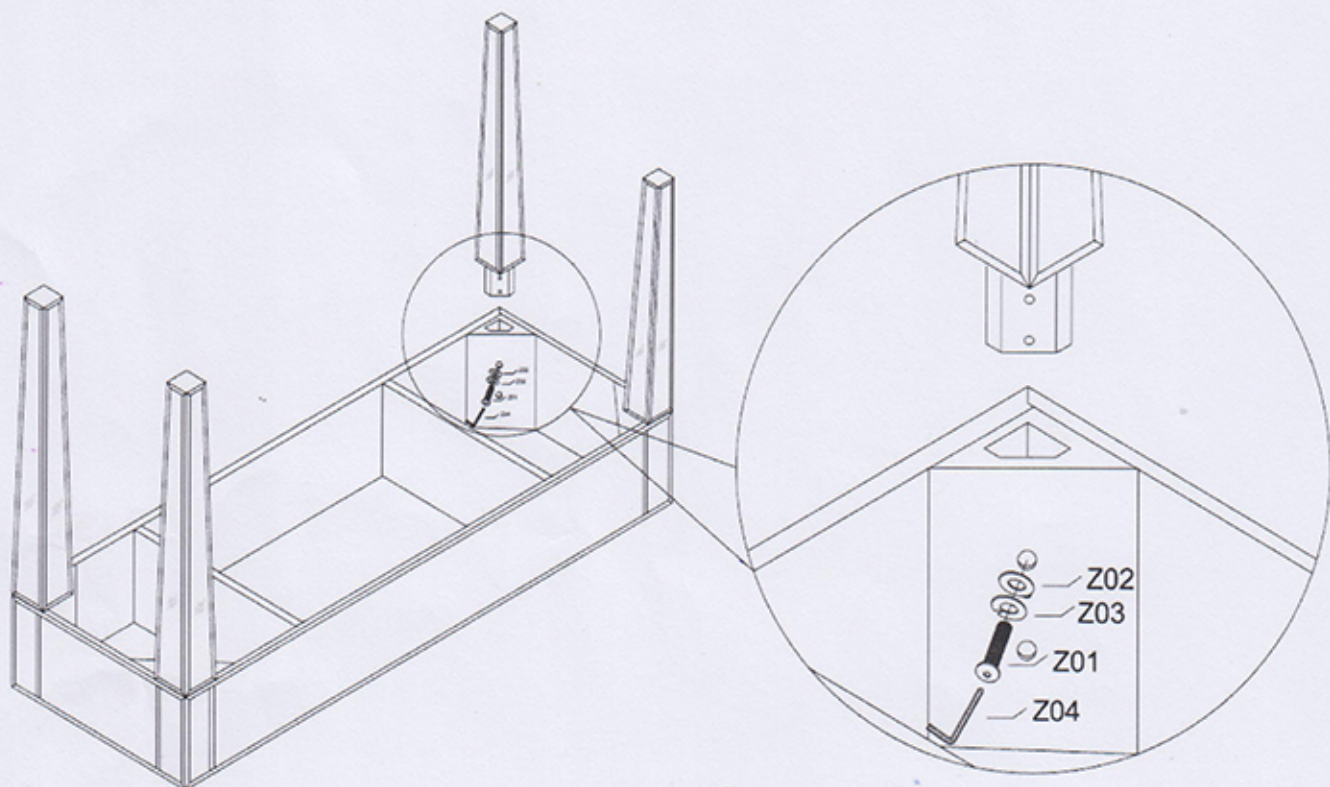

FINISH

