





Best Master Furniture™
The Imported Furniture Specialist


QUEEN BED ASSEMBLY INSTRUCTIONS item JJ025

BOX LIST

E	SideRail	2PCS
F	Center Support bar	1PC



H	Footboard	1PCS
I	Small Slat	24PCS
J	Feet	2PCS
K	Metal Leg Support	2PCS
L	LONG SLAT	1PCS




H

I

J

K

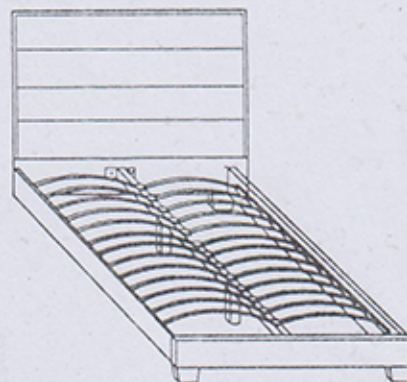

HARDWARE PACKED LIST IN BOX


a	Allen Key 5/16"	1PCS	b	Bolt 5/16" x 1.5"	12PCS	c	Screw 1.5"	4PCS	d	Flat Washer 5/16"	22PCS
e	Spring Washer 5/16"	22PCS				g	NUT 5/16"	4PCS	h	Roller plastic slat	26PCS
i	Center plastic slat	13PCS	j	Wrench Not provided		i	Allen Key 5mm	1PCS	k	Bolt 5/16" x 2"	4PCS

MADE IN CHINA

QUEEN BED ASSEMBLY INSTRUCTIONS item JJ025


STEP 1

Fasten U) to bottom of footboard (H) with screw(c).

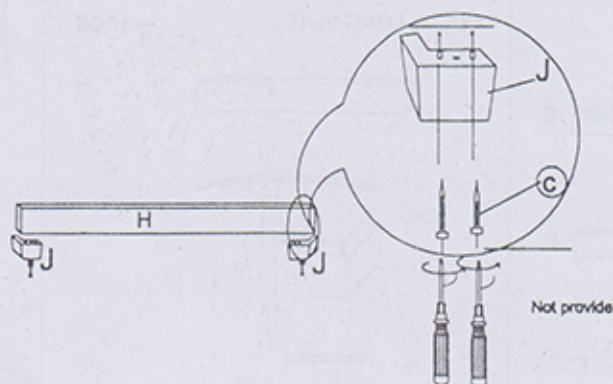

STEP1

Bolts to use for side rails, should already come pre-inserted on the HB. Place bolt (b), washers (e , d) and fasten to Headboard with preinstalled hardware, Repeat step 2 for Footboard. Do not tighten until step 3.

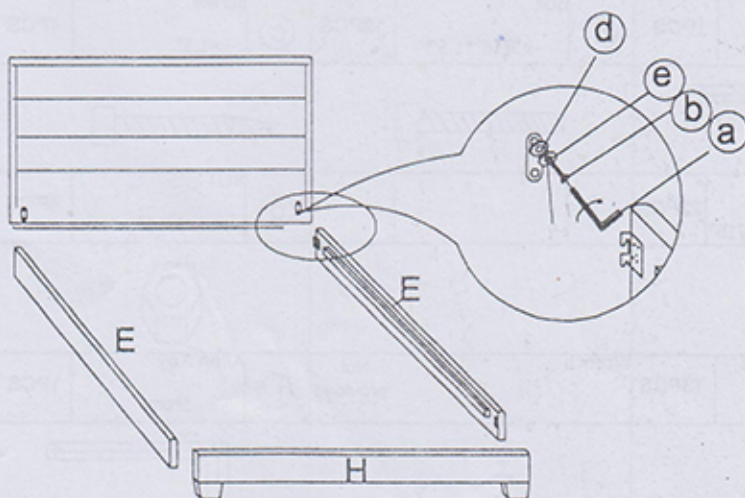


MADE IN CHINA

QUEEN BED
ASSEMBLY INSTRUCTIONS item JJ025


STEP3

Attach siderail (E) to headboard (G) and footboard (H) using bolt (b) and allen key (a) as shown in diagram. Do not tighten bolts completely until assembly is completed

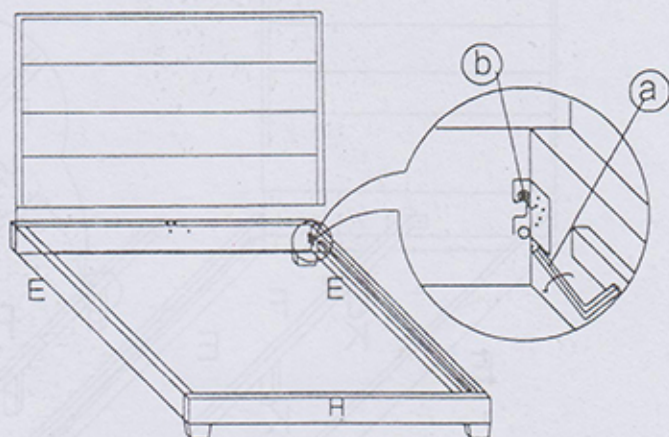

STEP 4

Attach center support (F) to headboard (G) by using bolt (b) through washers (e , d) as shown in diagram.

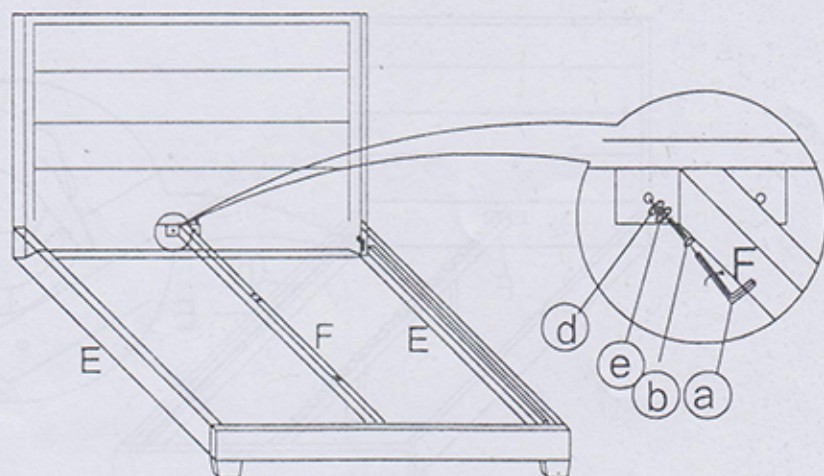


MADE IN CHINA

QUEEN BED
ASSEMBLY INSTRUCTIONS item JJ025


STEPS

Attach leg support (K) to center support bar (F) by using bolt (k), washers (e , d), nut (g), and tighten the nut (g) by wrench.

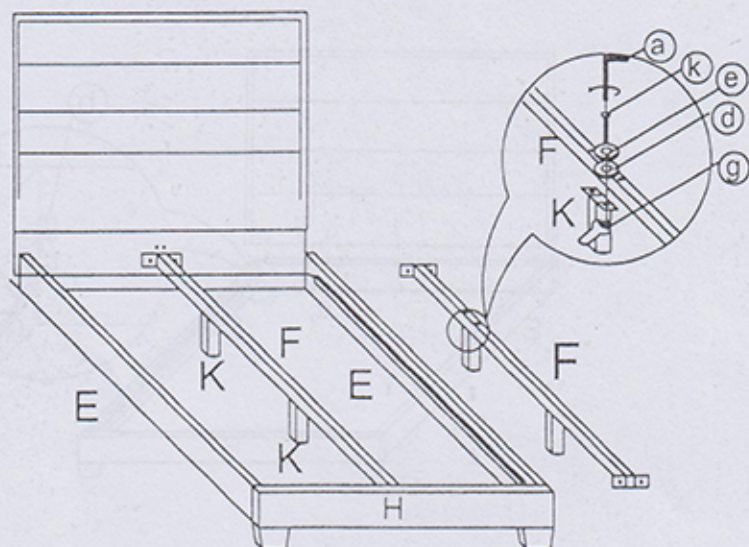

STEP 6

Insert center plastic slot (i) into holes on center support bar (F). Press firmly into place as shown in diagram. Attach rail plastic slat (h) using same procedure.

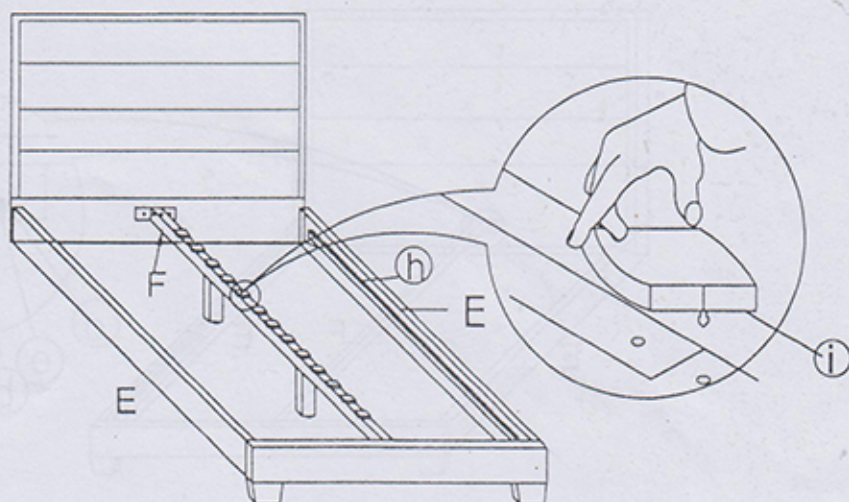


MADE IN CHINA

QUEEN BED
ASSEMBLY INSTRUCTIONS item JJ025


STEP 7

Insert small slat (I) into plastic slats (h , i) as shown in diagram. .

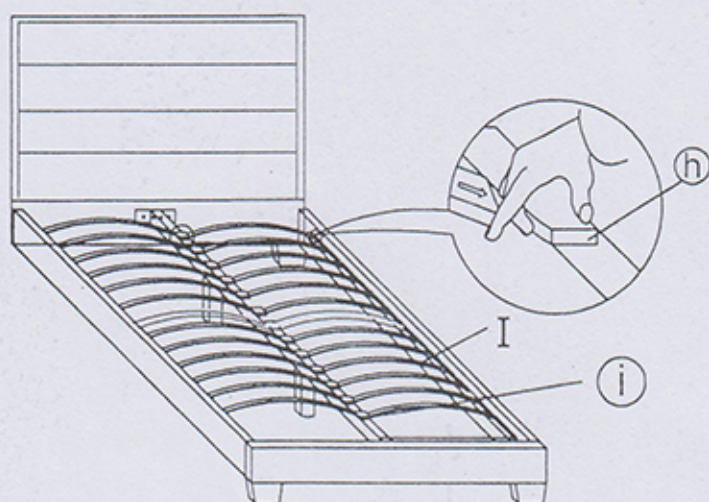

STEP 8

Assembly is complete.

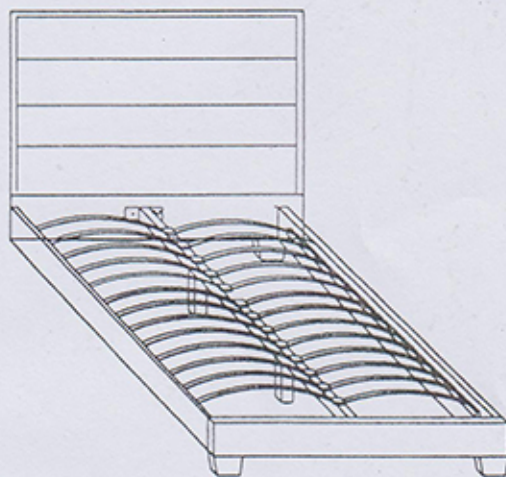

MADE IN CHINA