

BA227-BARCHAIR ASSEMBLY INSTRUCTION

A



M6 x 15

x 4

B



x 4

C




x 1



Best Master Furniture™
The Imported Furniture Specialist

step1

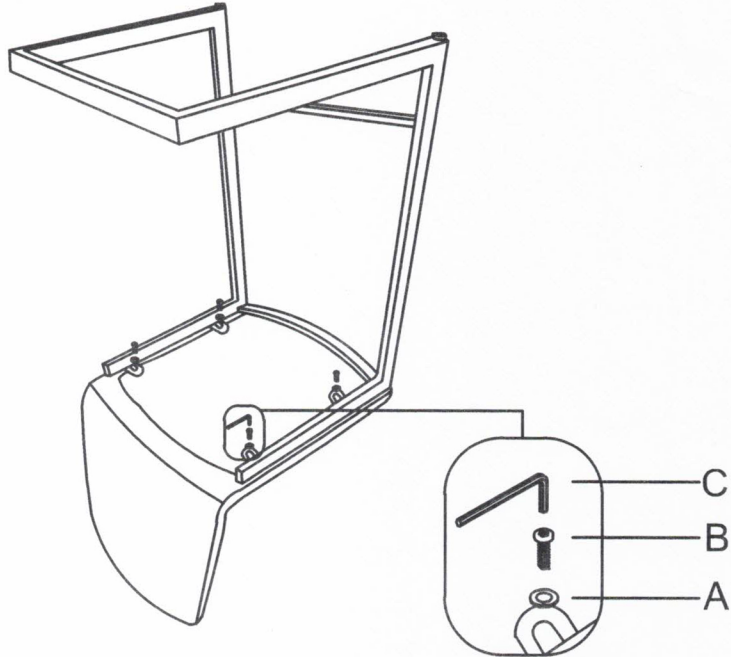

step2

