







Best Master Furniture™
The Imported Furniture Specialist

ASSEMBLY INSTRUCTION

ITEM#: B1932 Bed-F/Q

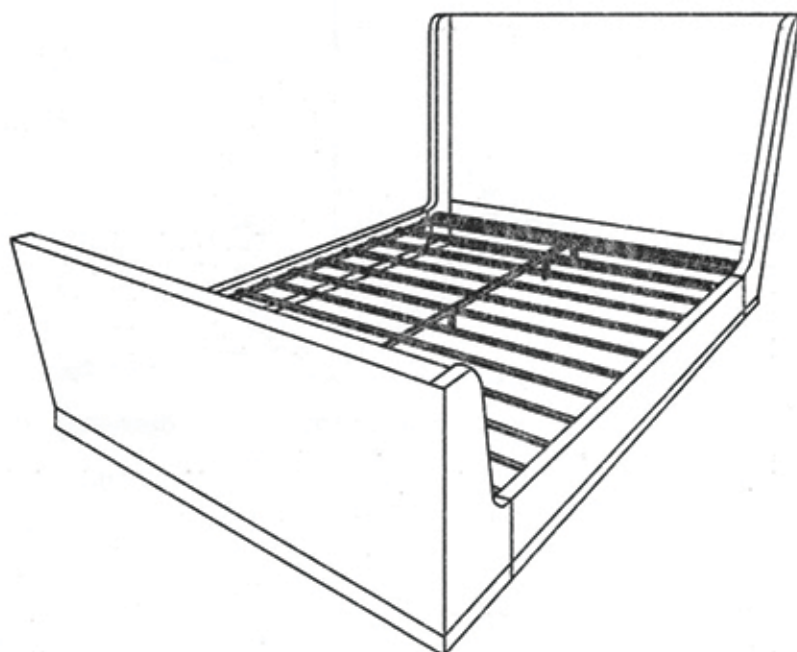

1 of 3
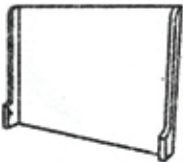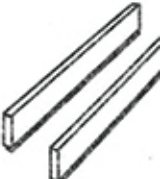
#1*1pc  Headboard	#2*1pc  Footboard	#3*4pcs  Wood Rail on the bedrail	#4*1pc  Middle support rail of slats	#5*2pcs  Side rail
#6*13pcs  Slats	#7*4pcs  Center leg	#8*2pcs  Wood Block on Headboard & Footboard		

Hardware list:

#A*1pc



Ø5/16"

#B*24pcs



Ø5/16"×3/4"

#C*24pcs




Ø5/16"

#D*24pcs



Ø5/16"

#F*4pcs



Ø1/4"×2 1/2"

#E*28pcs




M6×35mm

#G*4pcs



#H*14pcs



Ø1/4"×2"

#I*18pcs



Ø1/4"


#J*18pcs



Ø1/4"


Step 1.

Attach #G Metal plate to bedrail and Headboard #1 & Footboard #2 with Bolt (B), Lock washer (D) and Flat Washer (C). Tighten with Allen Key (A).

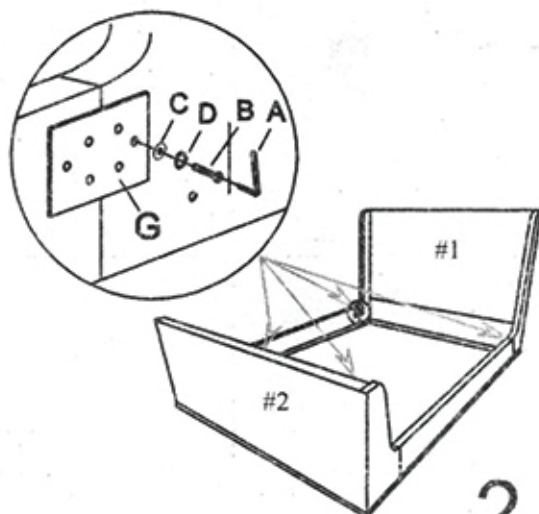

Step 2.


Attach #3 Wood rail of the bed rail to Side rail #5 and HB #1 & FB #2 with Bolt (H), Lock washer (J) and Flat Washer (I). Tighten with Allen Key (A).

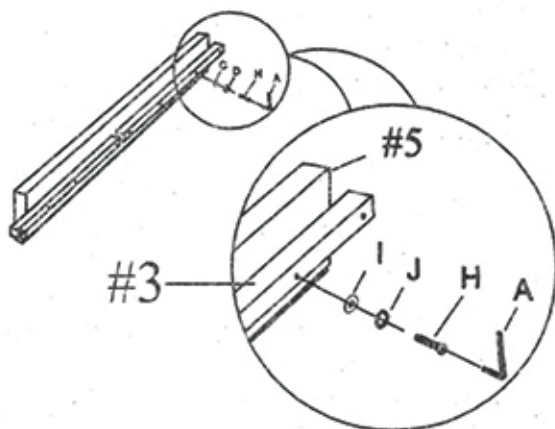

2 of 3


Step 3.

Attach Wood Block #8 to Headboard & Footboard with Bolt (H), Lock washer (J) and Flat Washer(I). Tighten with Allen Key(A).

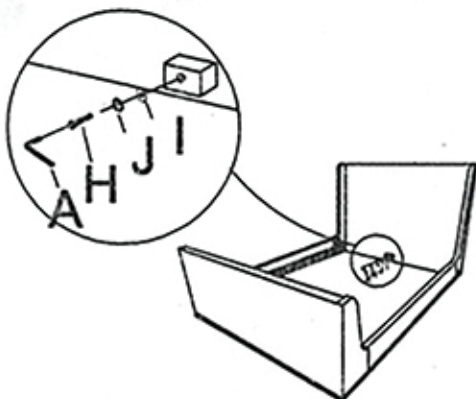


Step 4.

Attach #4 Middle support rail of slats to Headboard #1 & Footboard #2 By screw E.

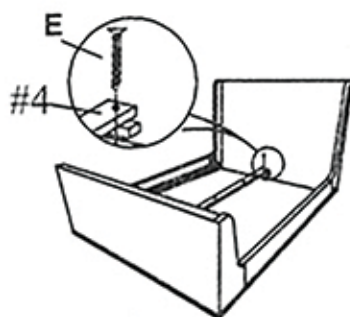


Step 5.

Attach Slats #6 to Side rail #5 by screw #E

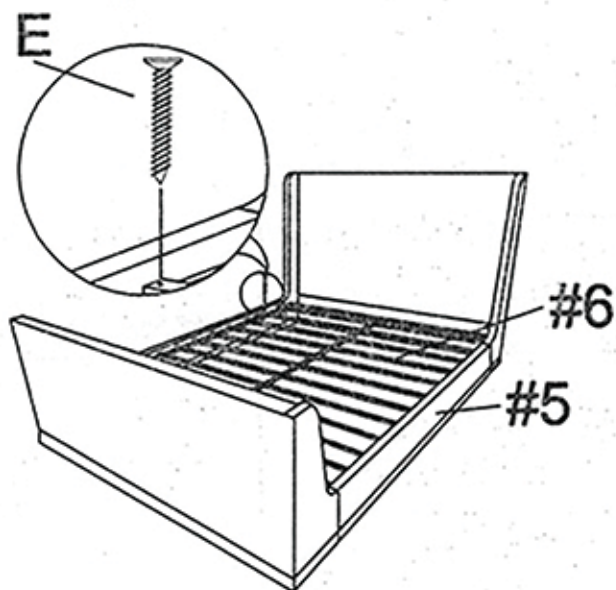

Step 6.

Attach Center Leg #7 to middle support rail #4 & slats #6 with Bolt (F), Lock washer (J) and Flat Washer(I). Tighten with Allen Key(A).

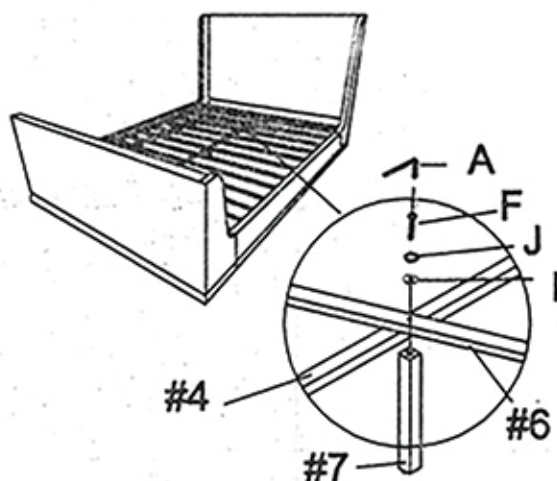

Step 6.

Done

