


















Best Master Furniture™
The Imported Furniture Specialist

ASSEMBLY INSTRUCTION

Item: 623 Accent Chair


PARTS LIST:

A	BOLT:5/16**3-1/4" 4PCS		B	BOLT:5/16**2-1/4" 4PCS	
C	BOLT:5/16**2" 1PC		D	SPRING WASHER:9PCS	
E	FLAT WASHER:9PCS		F	ALAN KEY:1PC	
G	SCREW:1.5" 6PCS		H	FACING LEFT LEG:1PC	
I	FACING RIGHT LEG:1PC		J	CROSS BAR:1PC	
K	LEFT STRETCHER:1PC		L	RIGHT STRETCHER:1PC	
M	SEAT FRAME:1PC		N	CHAIR BACK:1PC	
		NOT INCLUDED			


Reminder: Do not tighten all bolts until fully assembled.

WARNING: This assembly was not designed for power tools. You will strip threading and/or drive bolts and screws too deep into the product causing them to come out on the finished side.
The use of power tools voids your warranty. Please use the hand tools recommended or provided.


STEP1: Attach each front legs (H/I) to inside seat frame (M) using bolt (B), spring washer(D), flat washer(E) and alan key (F) for each front legs

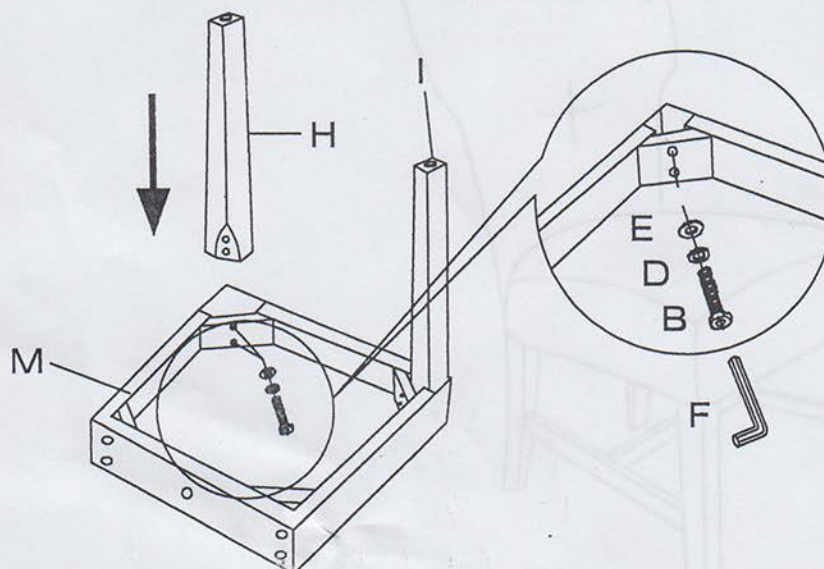

STEP2:Attach front legs (H/I) to chair back (N) with left stretcher (K) and right stretcher (L). Attach cross bar (J) between stretcher and Tighten stretcher with screws (G)

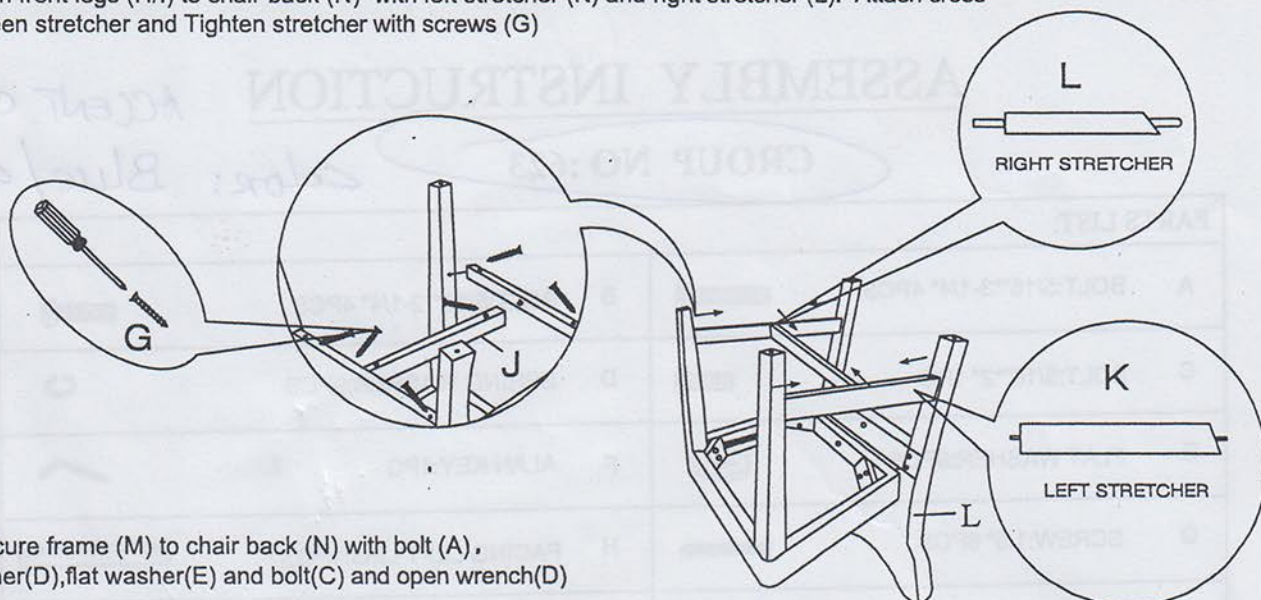

STEP 3:Secure frame (M) to chair back (N) with bolt (A), spring washer(D),flat washer(E) and bolt(C) and open wrench(D)

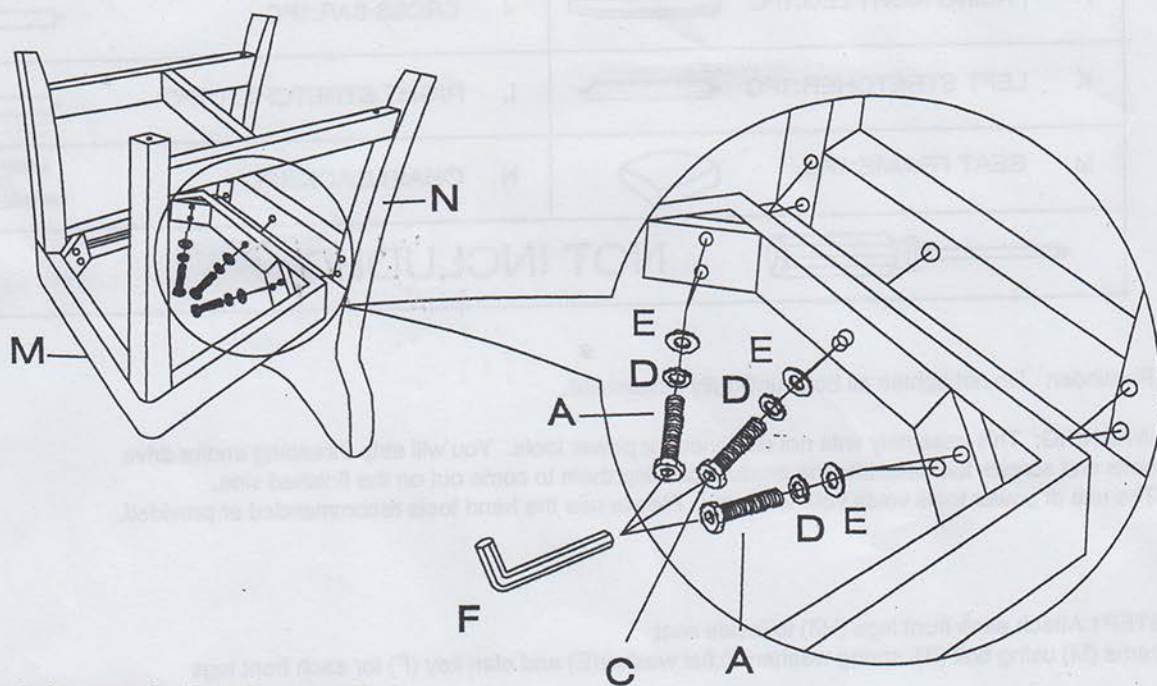

STEP 4:Tighten all the bolts securely. Turn the assembled chair to the upright position.

